


Wiring Diagram for Nuheat Thermostats

Always refer to the wiring diagram located on the back of the thermostat

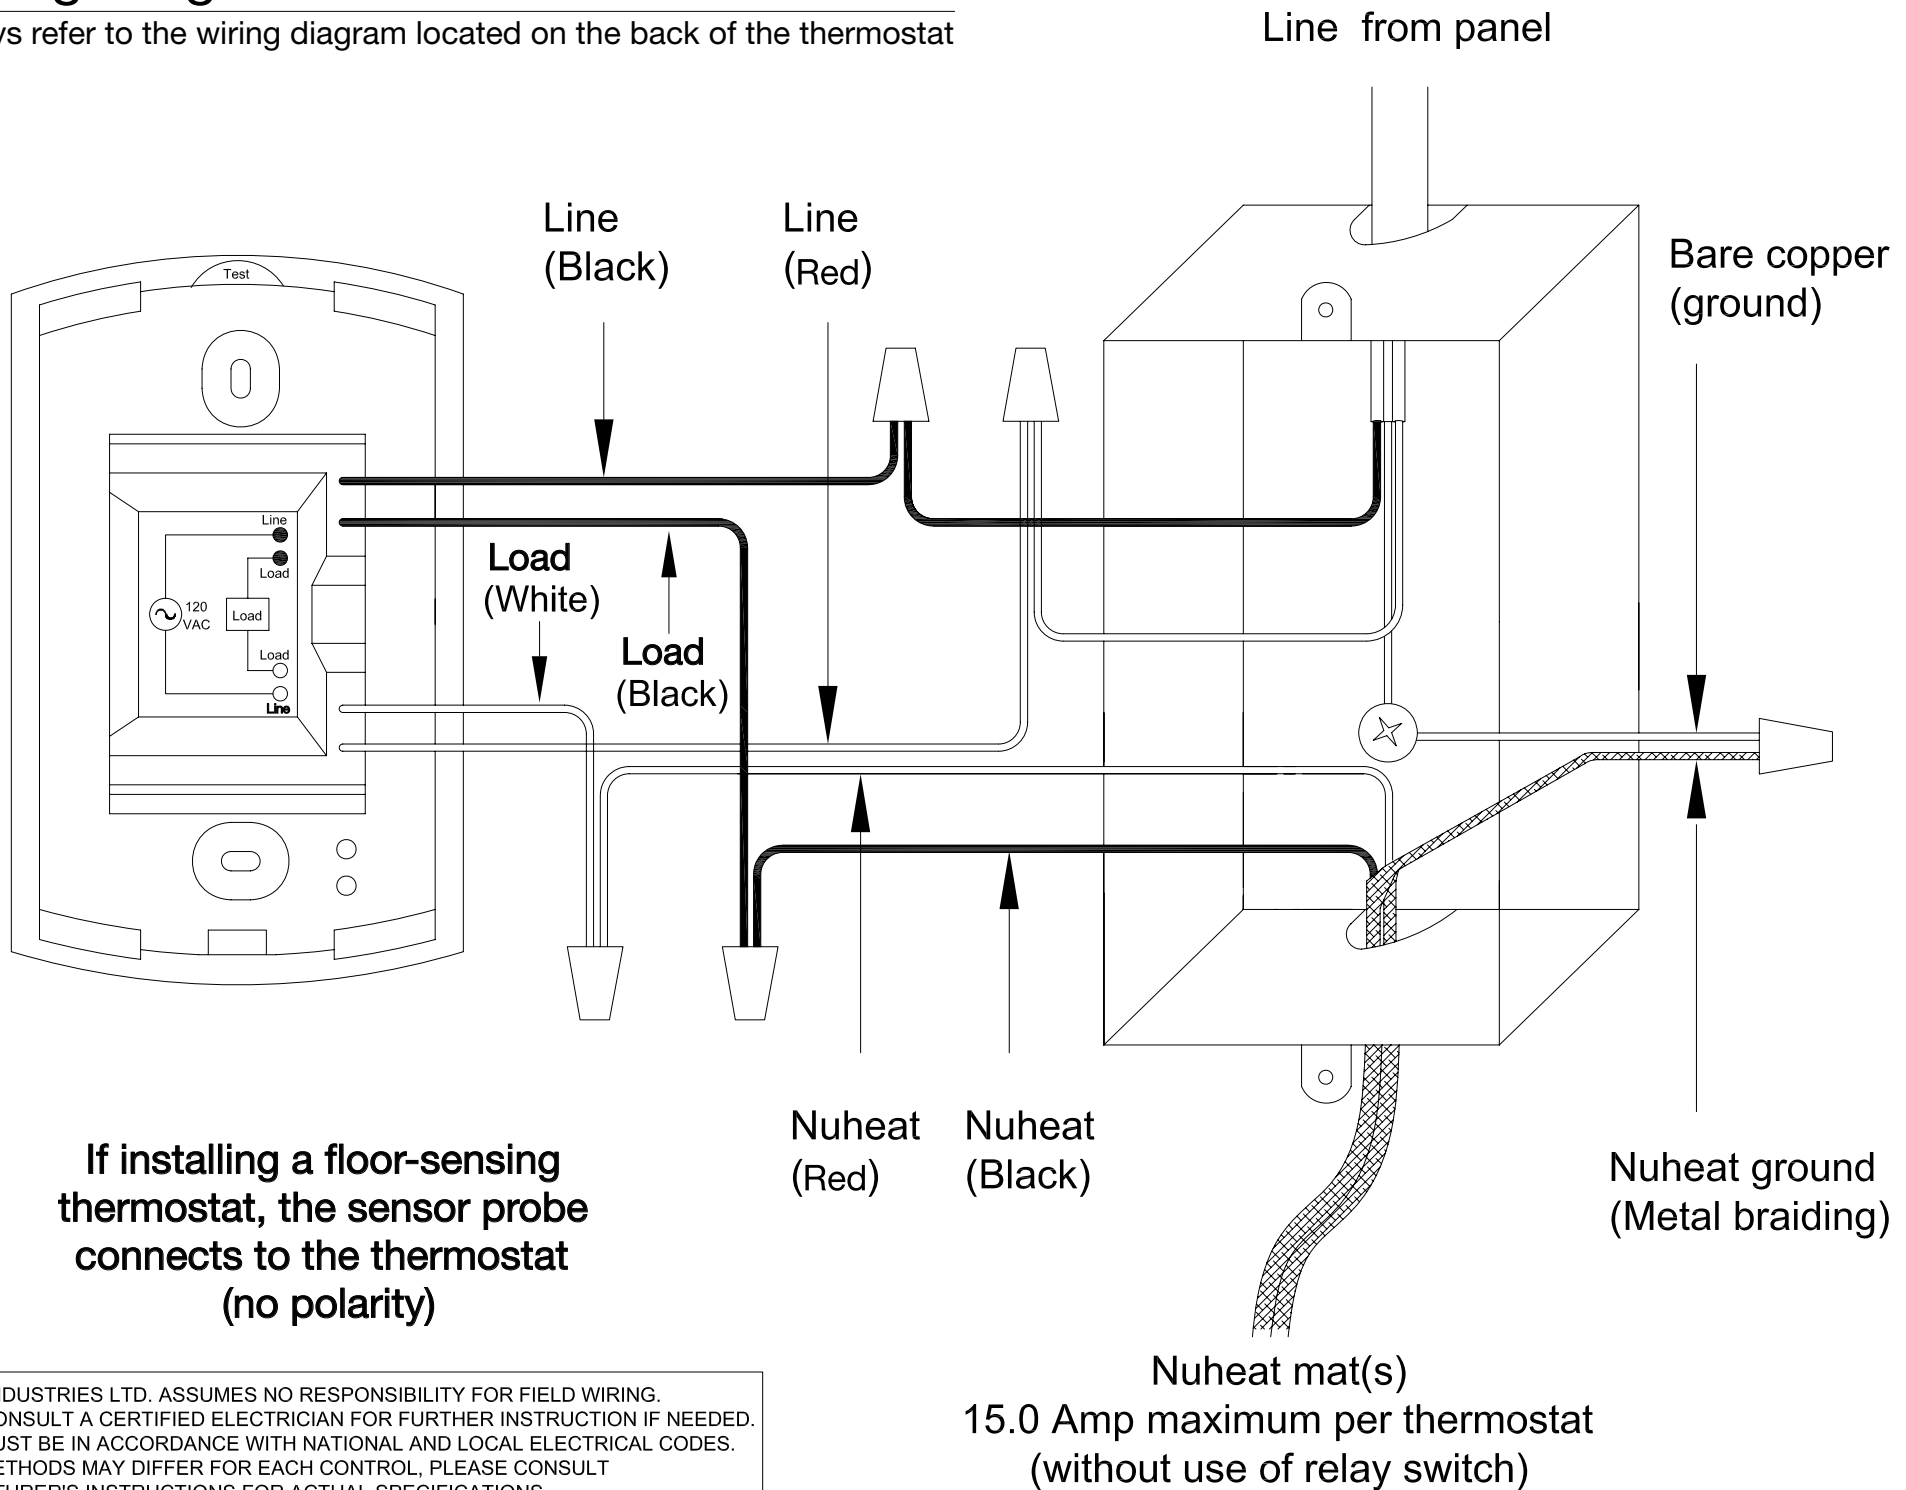

If installing a floor-sensing thermostat, the sensor probe connects to the thermostat (no polarity)

NUHEAT INDUSTRIES LTD. ASSUMES NO RESPONSIBILITY FOR FIELD WIRING. PLEASE CONSULT A CERTIFIED ELECTRICIAN FOR FURTHER INSTRUCTION IF NEEDED. WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES. WIRING METHODS MAY DIFFER FOR EACH CONTROL. PLEASE CONSULT MANUFACTURER'S INSTRUCTIONS FOR ACTUAL SPECIFICATIONS.

Nuheat mat(s)
15.0 Amp maximum per thermostat
(without use of relay switch)